


5' FAN TRELLIS

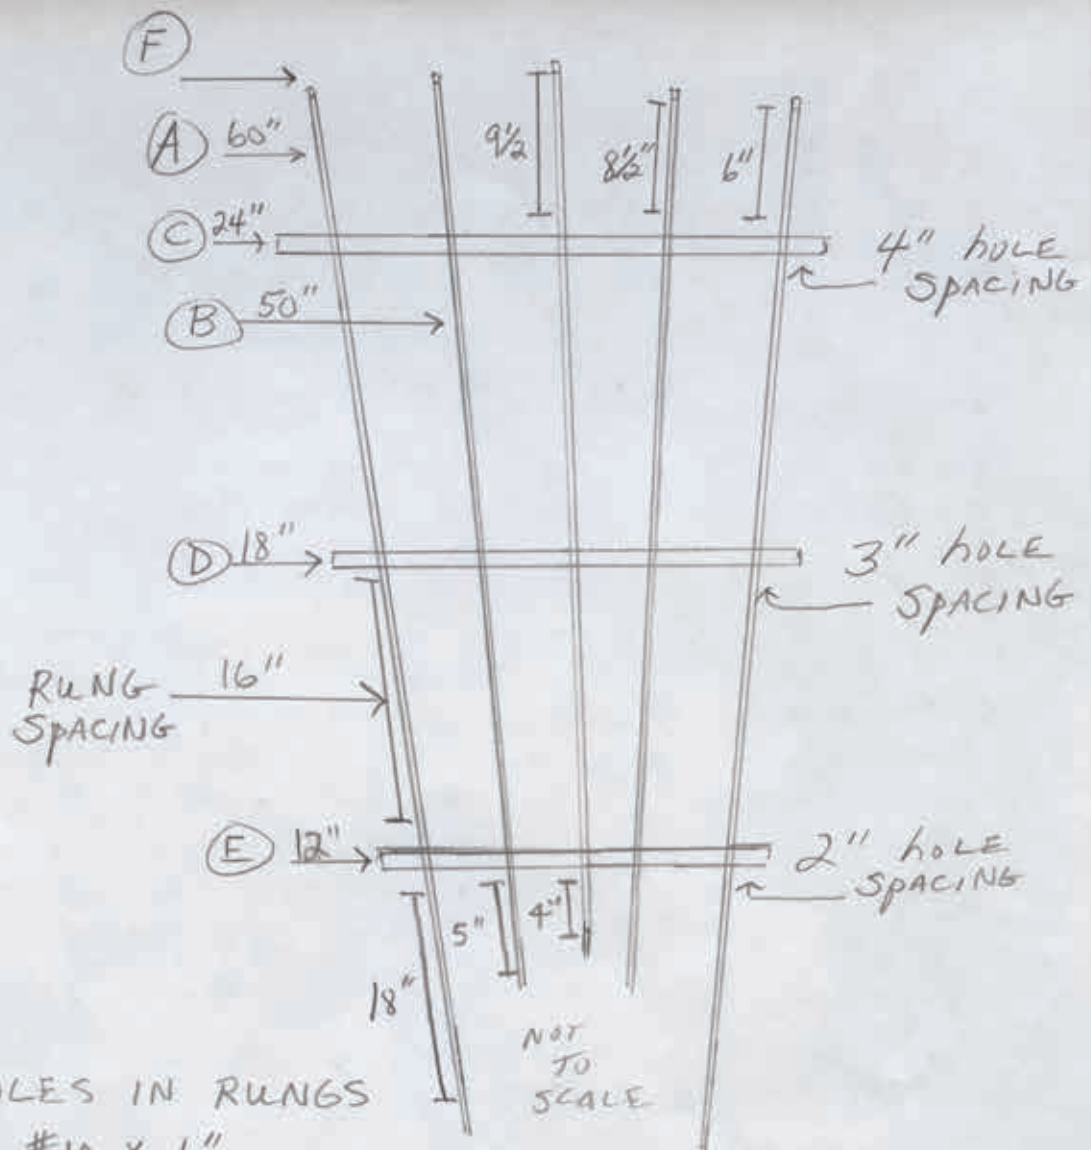

DRILL $\frac{3}{4}$ " HOLES IN RUNGS
 SECURE WITH #10 x 1"
 FLATHEAD WOOD SCREWS
 USING A $\frac{1}{8}$ " DRILLBIT
 FOR PILOT HOLES

- (A) 2 60" COPPER TUBING $\frac{1}{2}$ "
- (B) 3 50" COPPER TUBING $\frac{1}{2}$ "
- (C) 1 24" $1\frac{1}{2} \times \frac{1}{2}$ REDWOOD
- (D) 1 18" $1\frac{1}{2} \times \frac{1}{2}$ REDWOOD
- (E) 1 12" $1\frac{1}{2} \times \frac{1}{2}$ REDWOOD
- (F) 5 $\frac{1}{2}$ " COPPER CAPS